


Load Diagrams

Program 0170 Rubber Buffers




Calculation Example

Energy-Travel-Diagram Ø 50

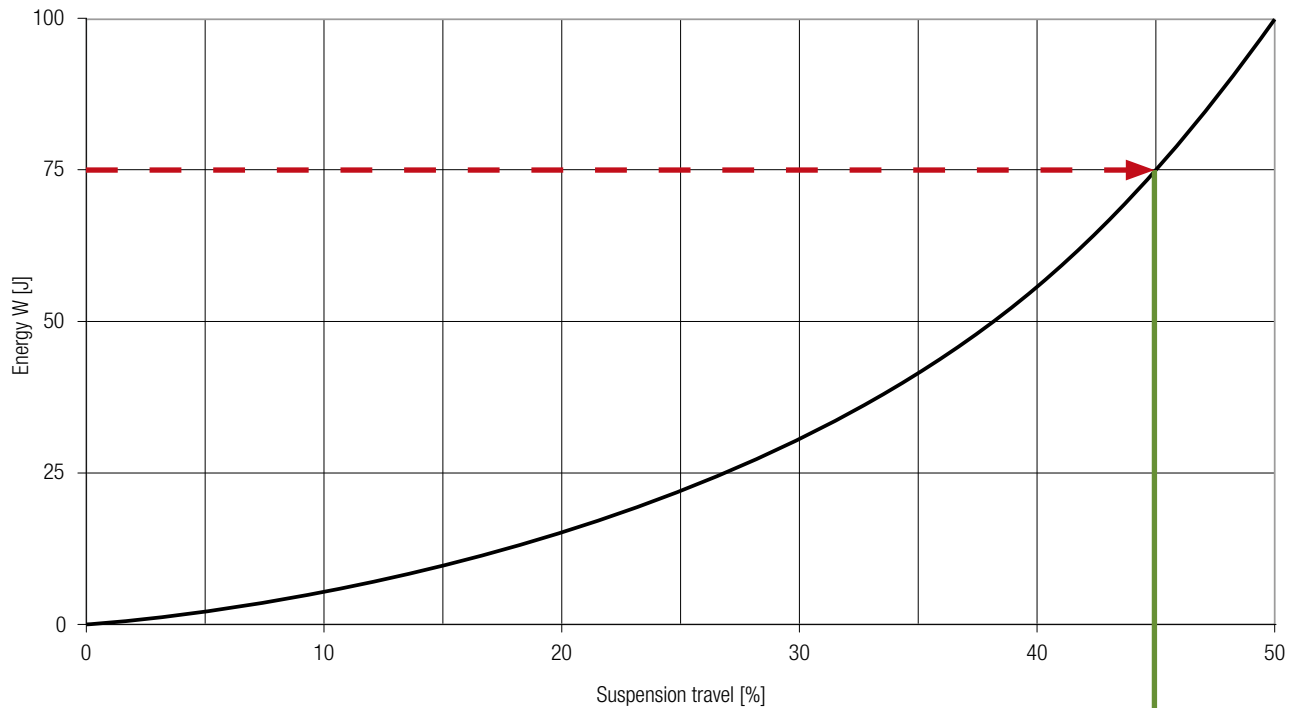

Force-Travel-Diagram Ø 50

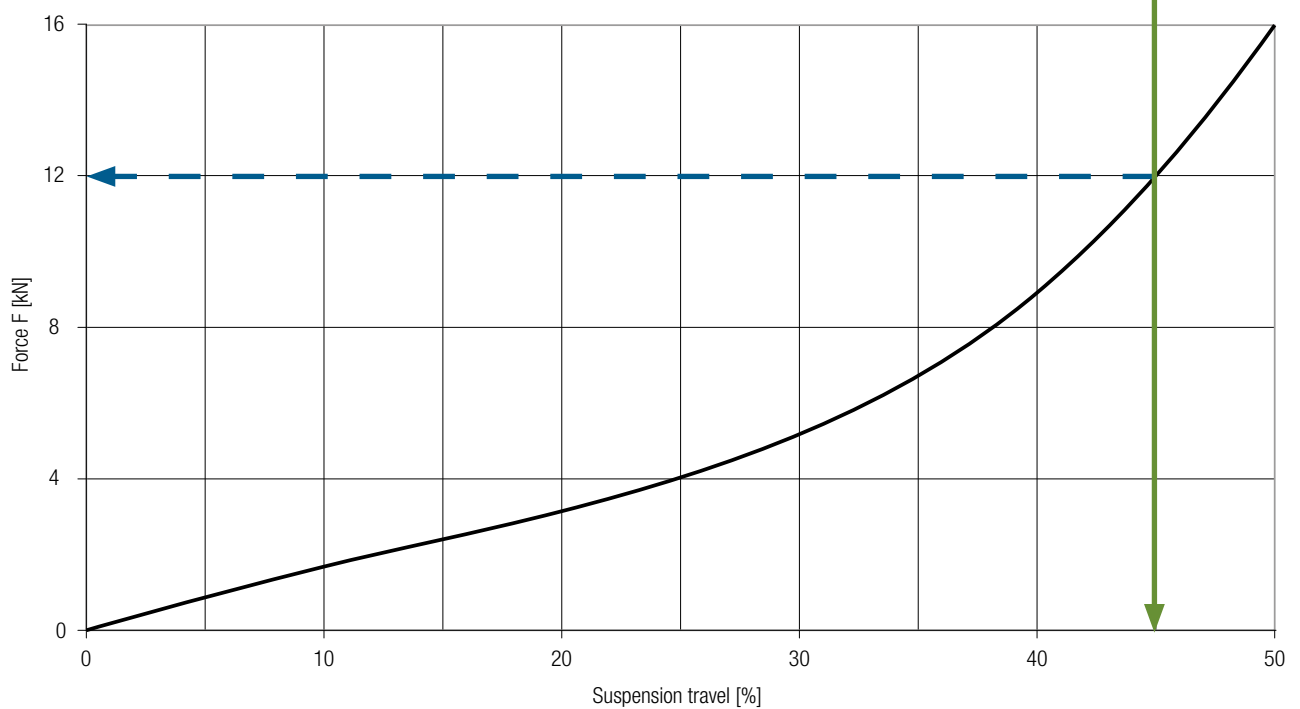


1. Calculation of energy per buffer: $W = \frac{1}{2} m \times v^2$
2. Readout compression length from the diagram
3. Readout final load of the buffer from the table
4. Result and verification
 - $s < 0,5 \times h$
 - $F < F_{max}$ of the crane structure
 - $a = v^2/2s < a_{max}$


W = Energy Absorption [J]
s = Travel [mm]
F = Force [kN]
v = Velocity [m/s]
m = Mass [kg]
h = Buffer height
a = deceleration

- Max. deflection = 50%
- Valid for solid-rubber buffers with $h = 0,8 \times d_1$


Energy-Travel Ø 40

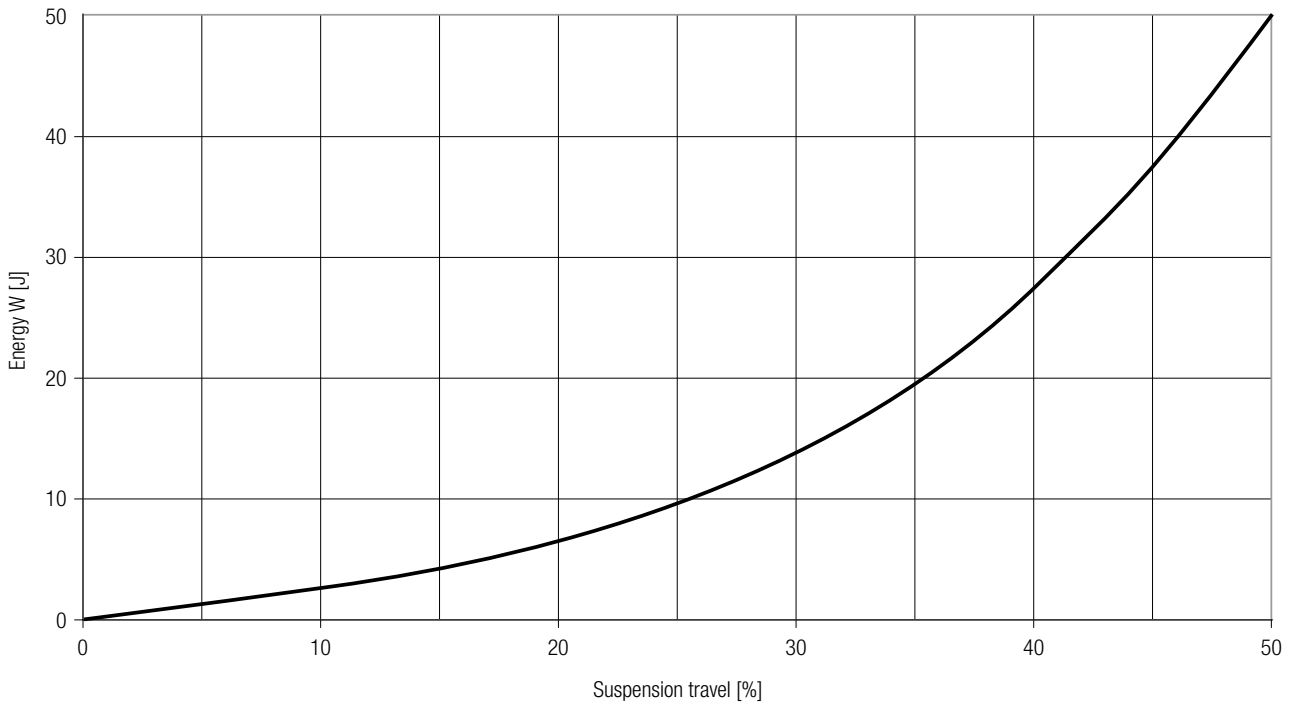


Force-Travel Ø 40

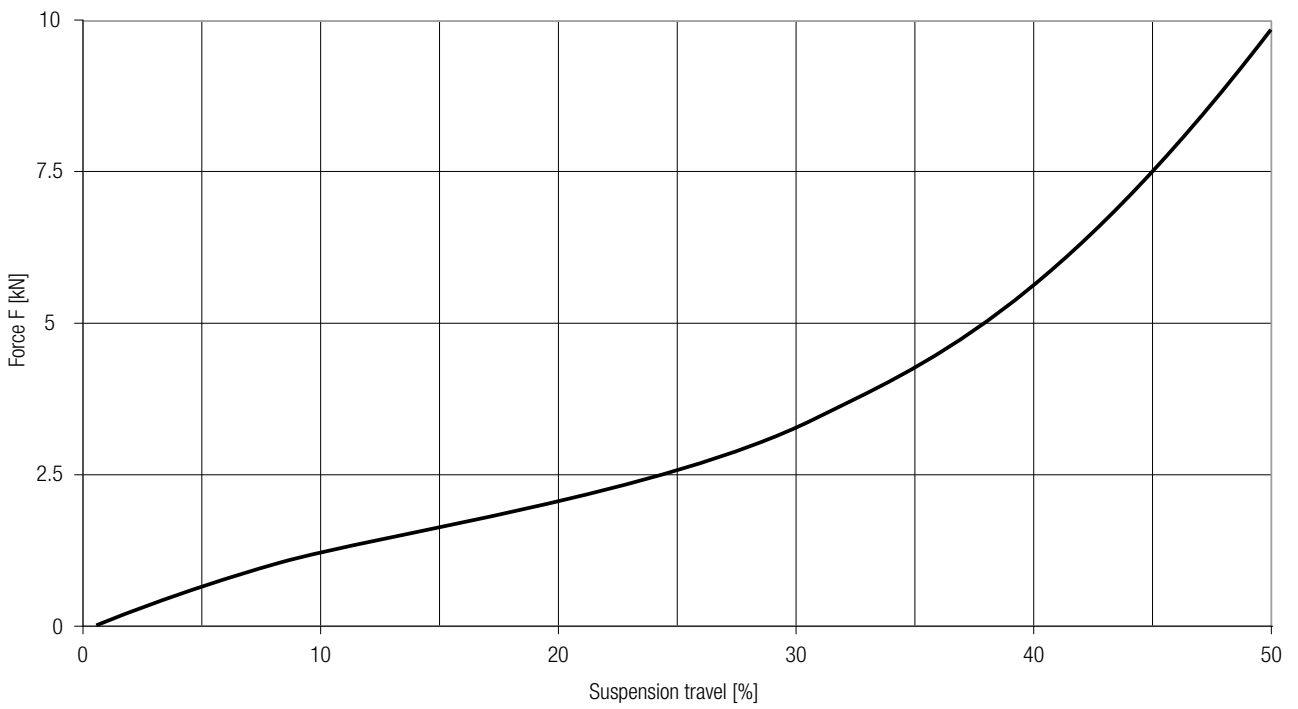


Energy-Travel Ø 50

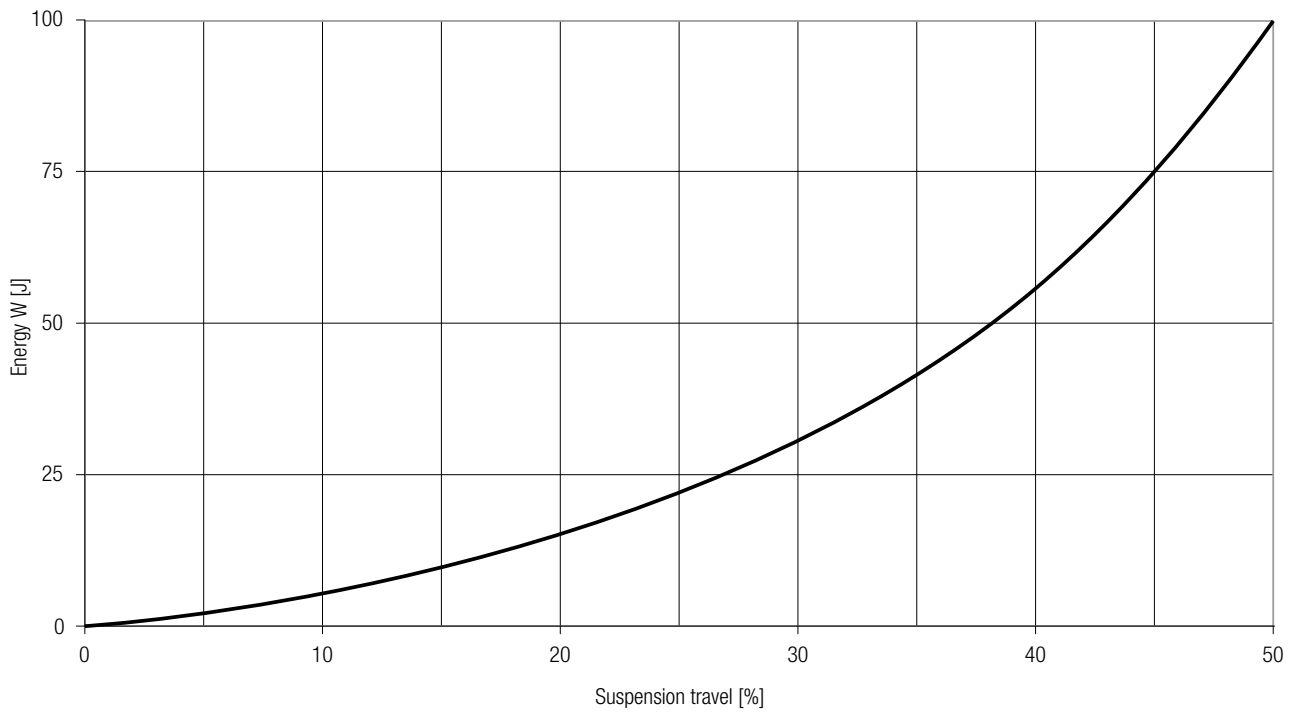


Force-Travel Ø 50

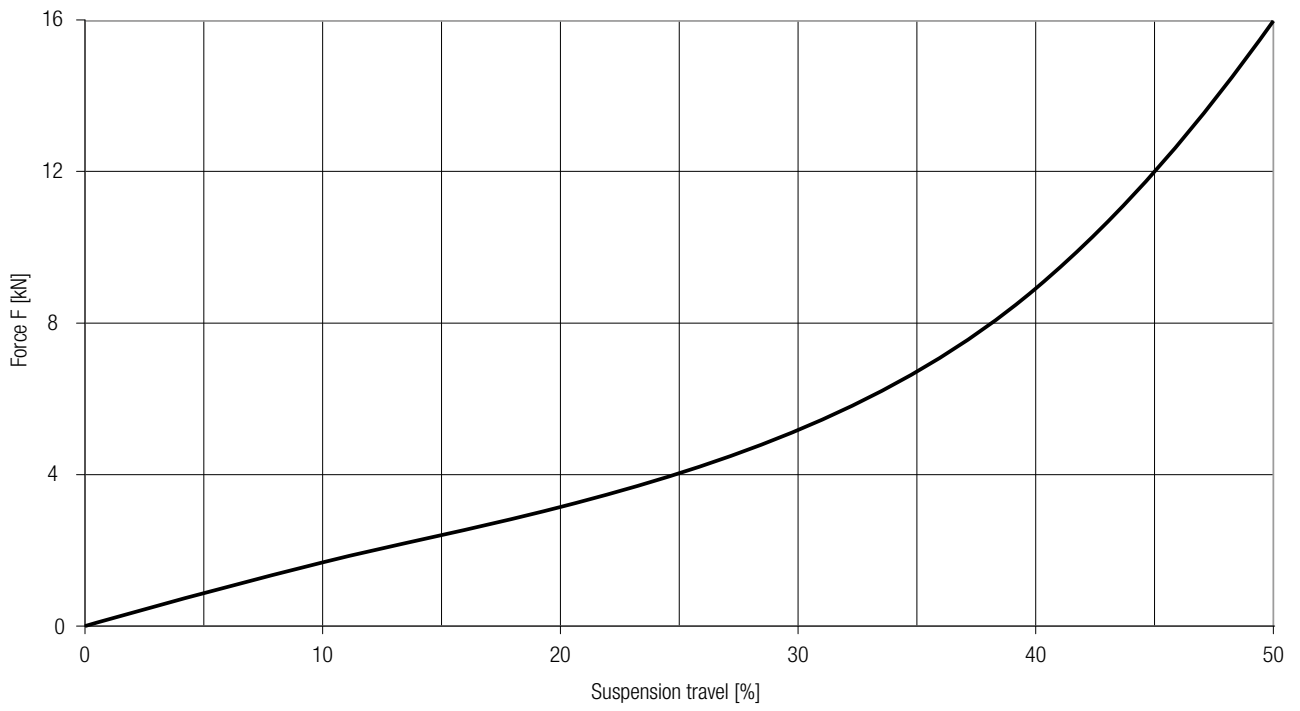


Energy-Travel Ø 63

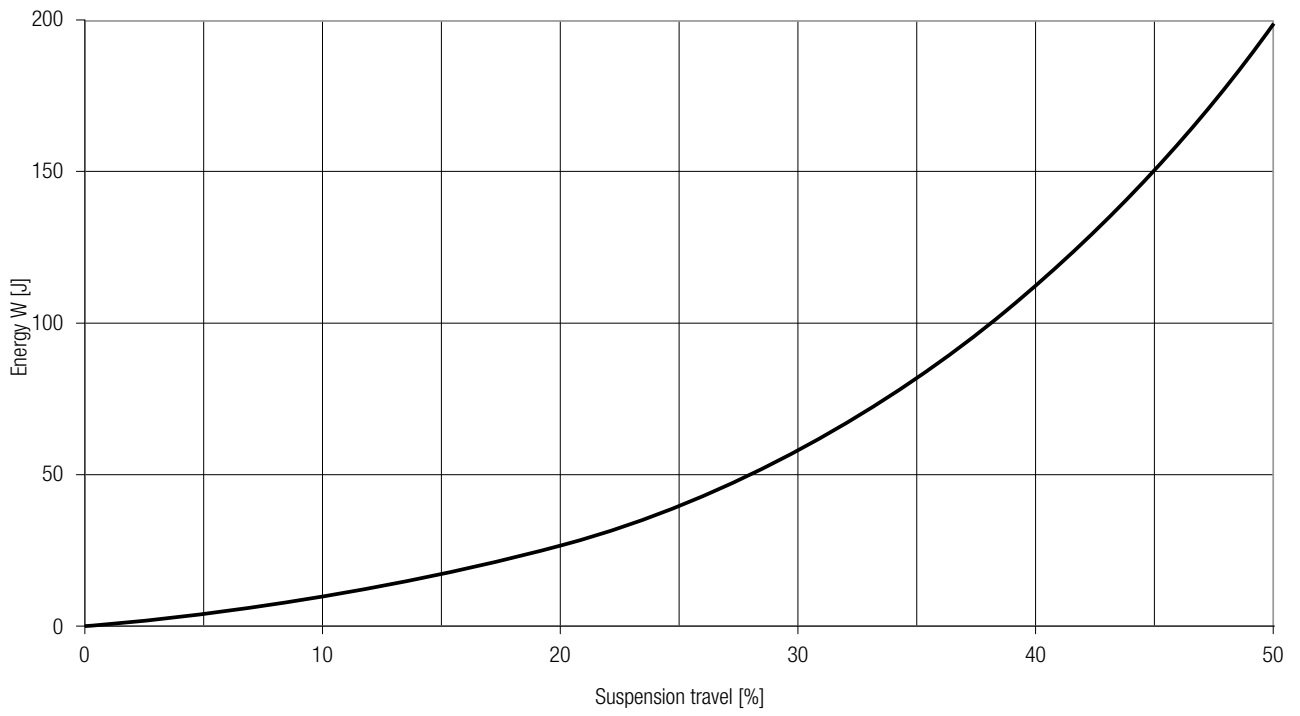


Force-Travel Ø 63

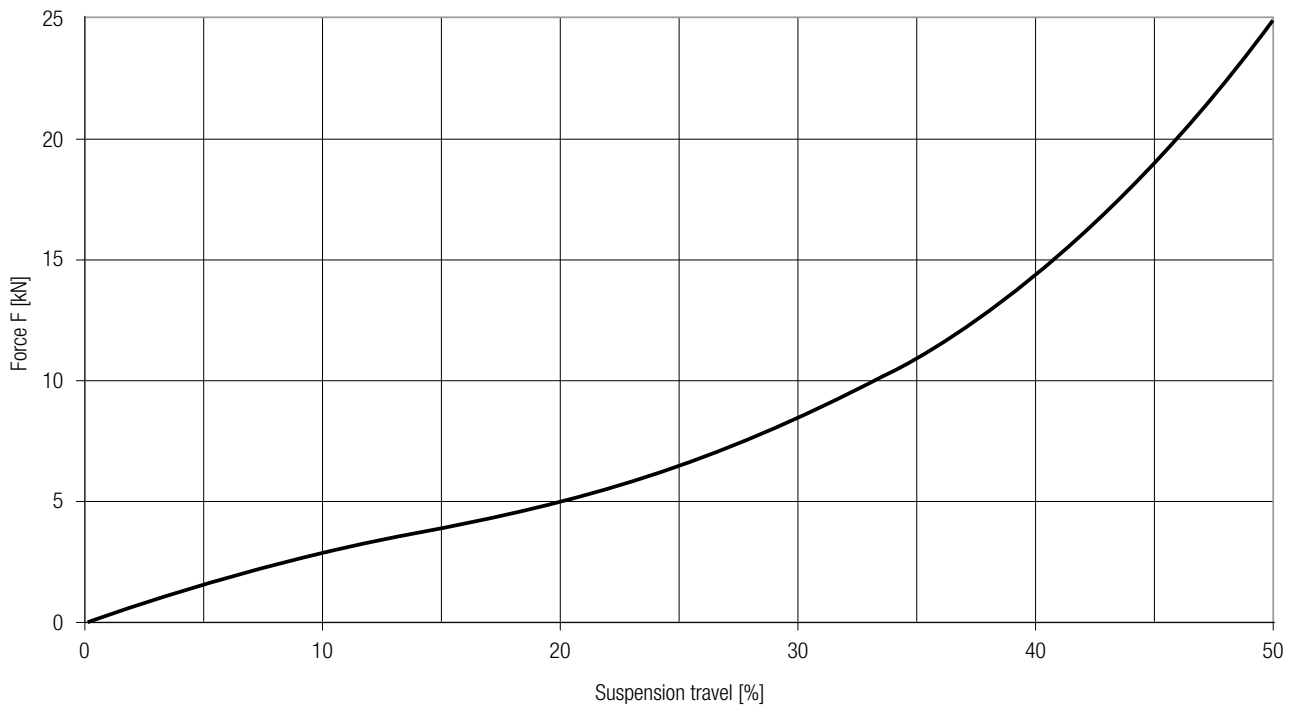


Energy-Travel Ø 80

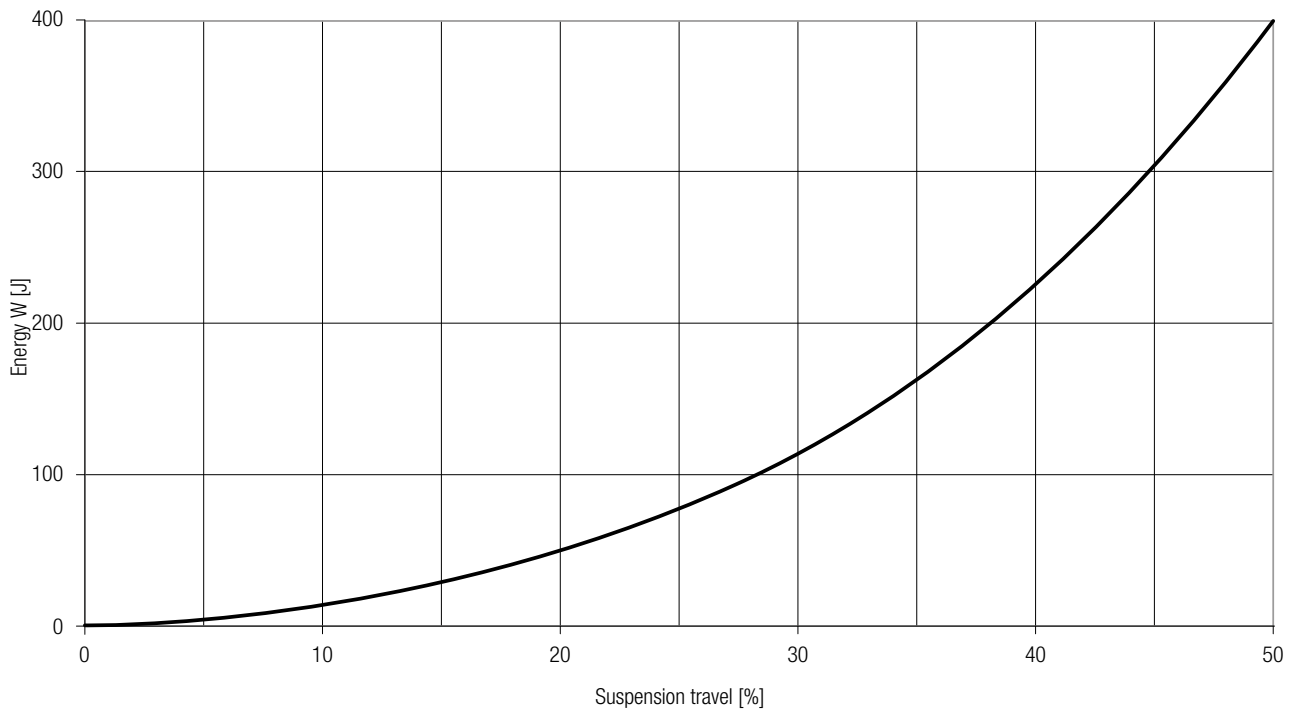


Force-Travel Ø 80

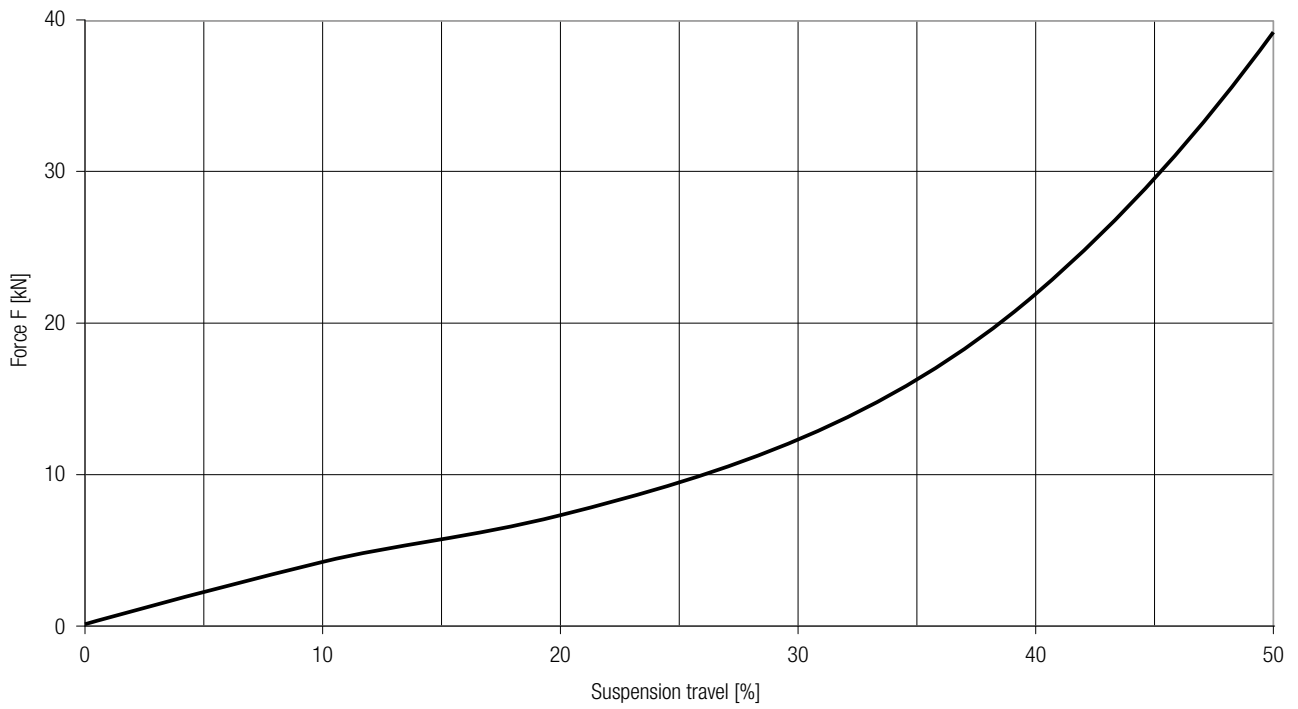


Energy-Travel Ø 100

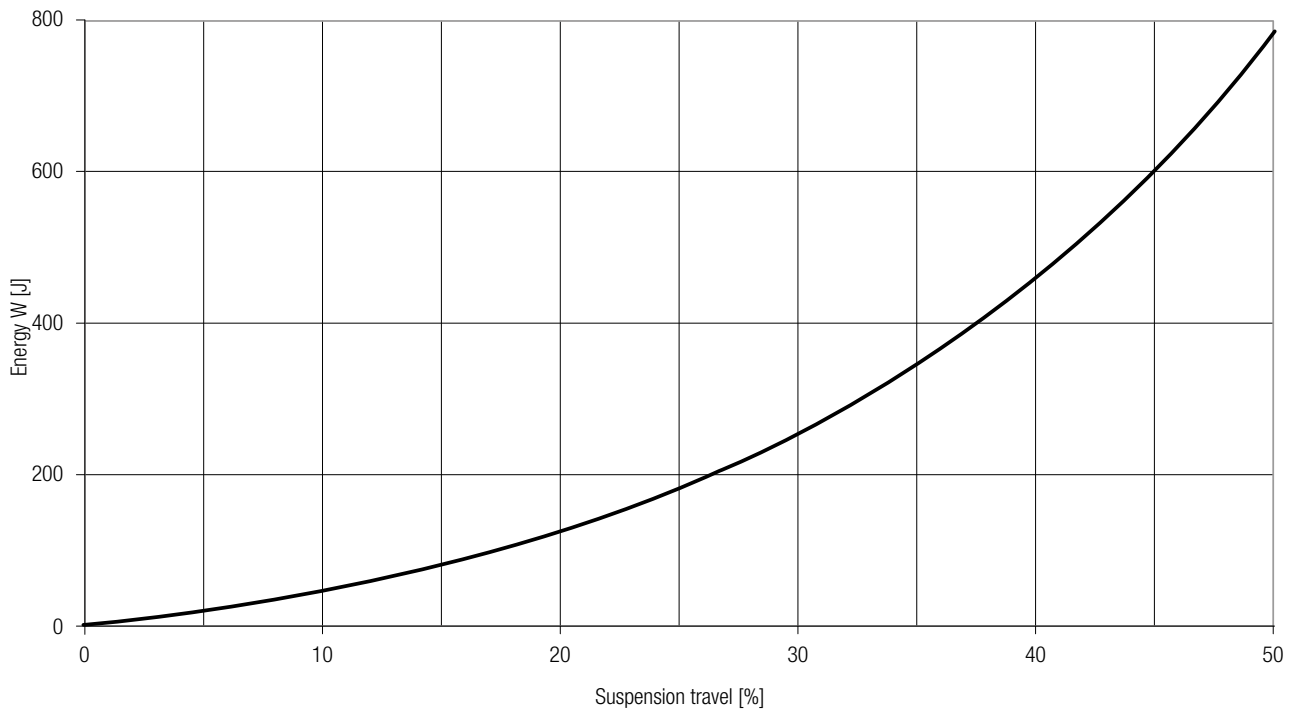


Force-Travel Ø 100

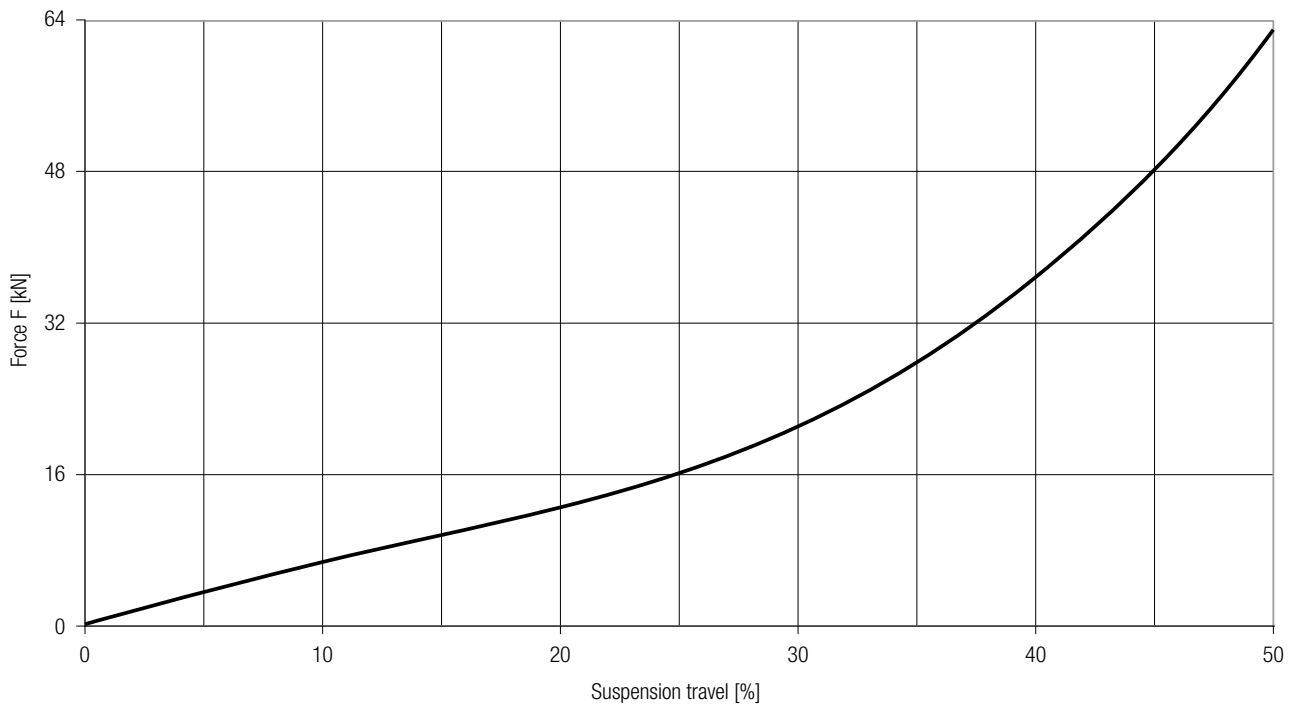


Energy-Travel Ø 125

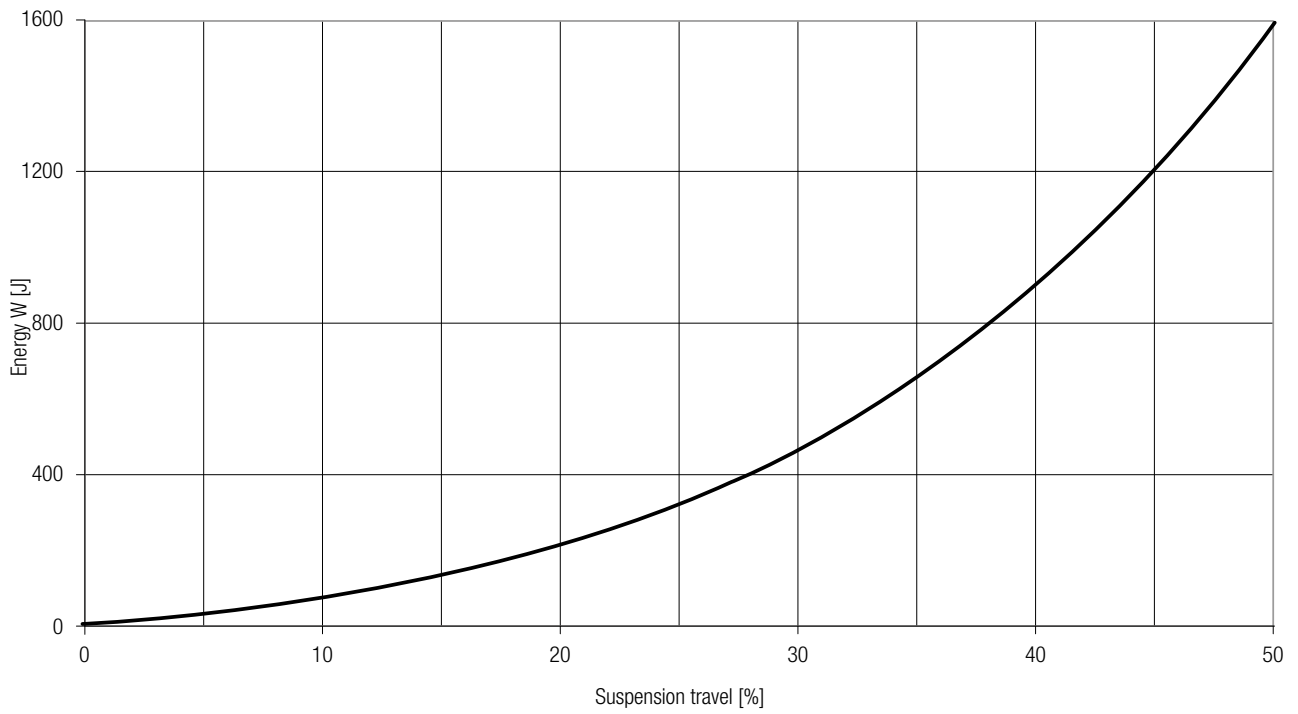


Force-Travel Ø 125

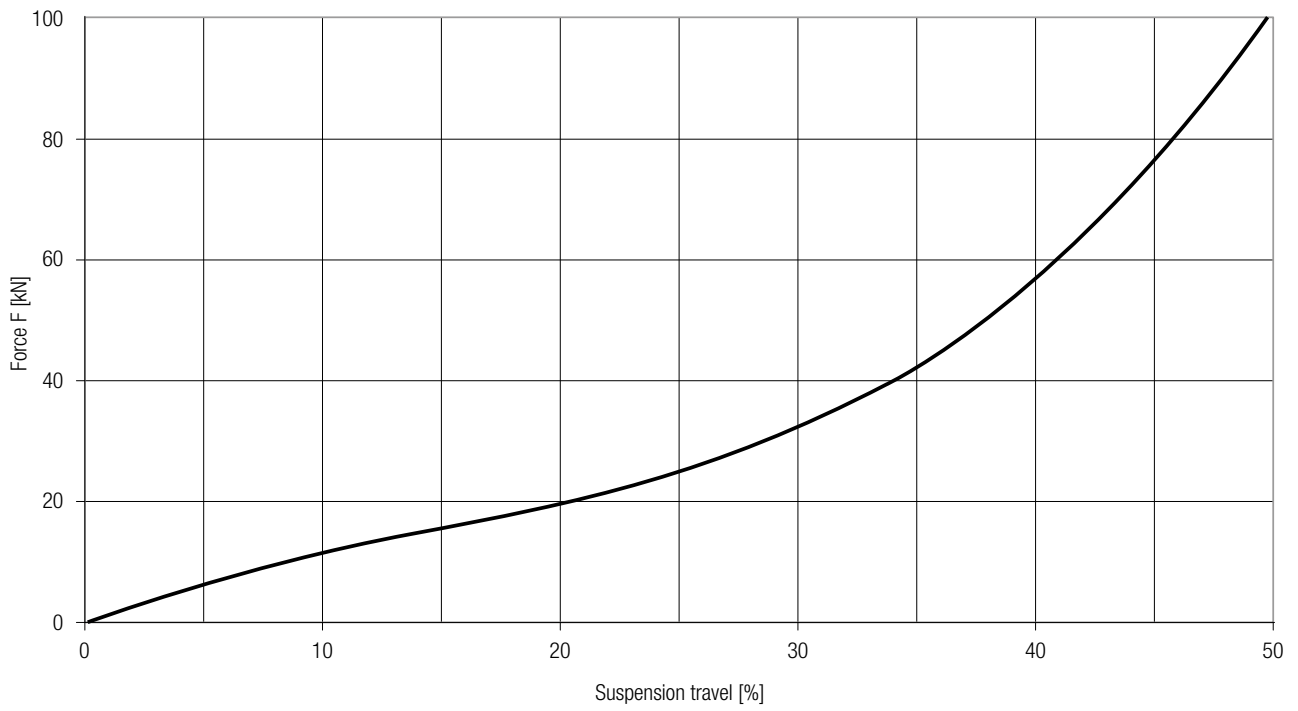


Energy-Travel Ø 160

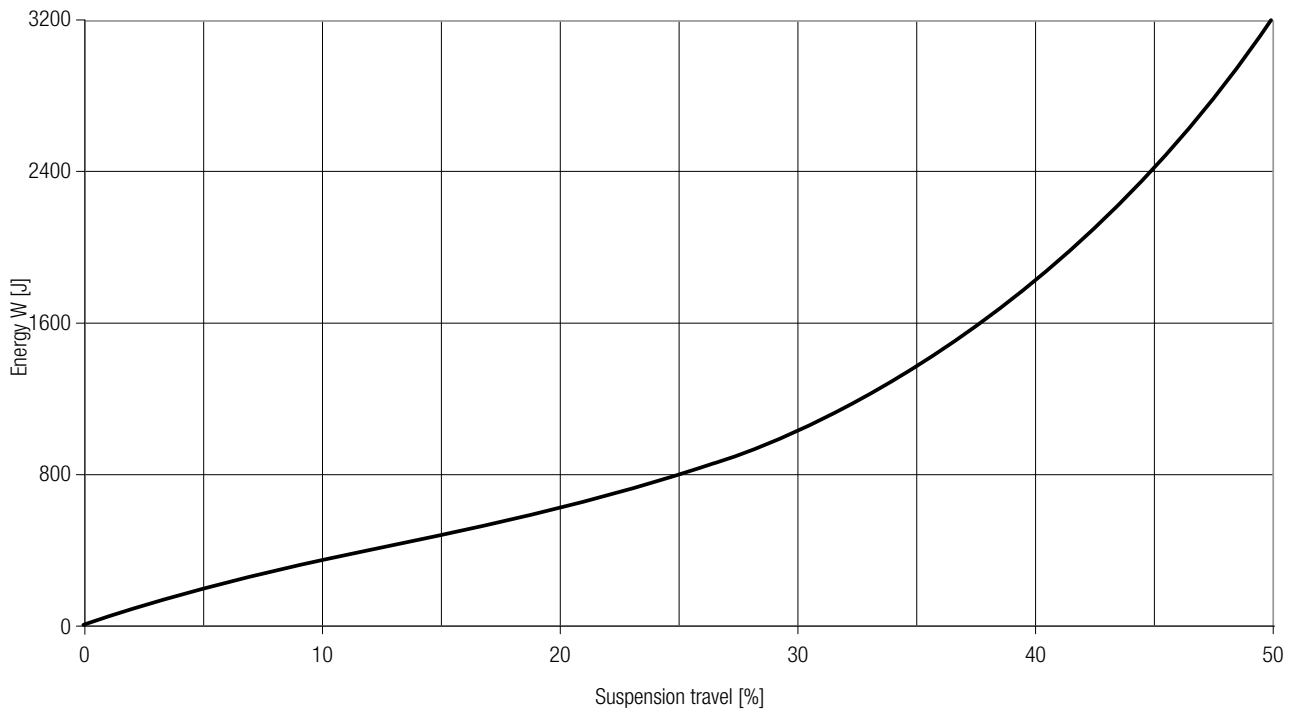


Force-Travel Ø 160

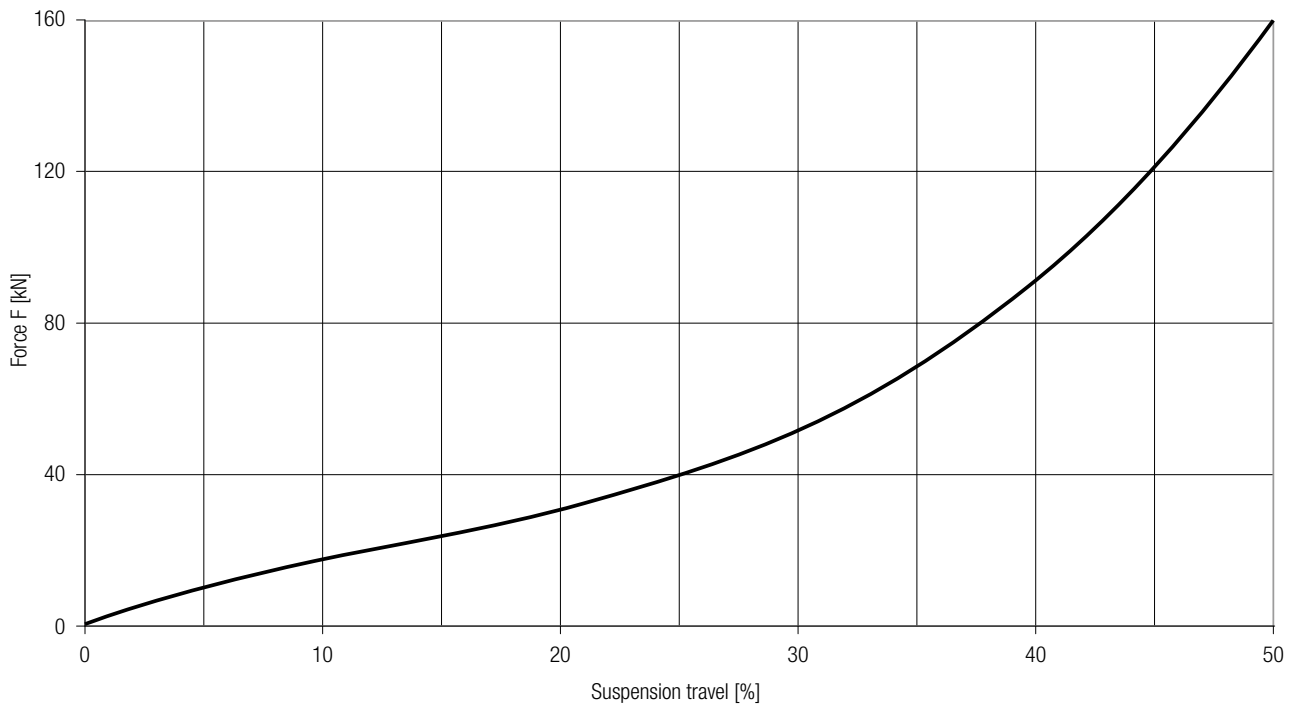


Energy-Travel Ø 200

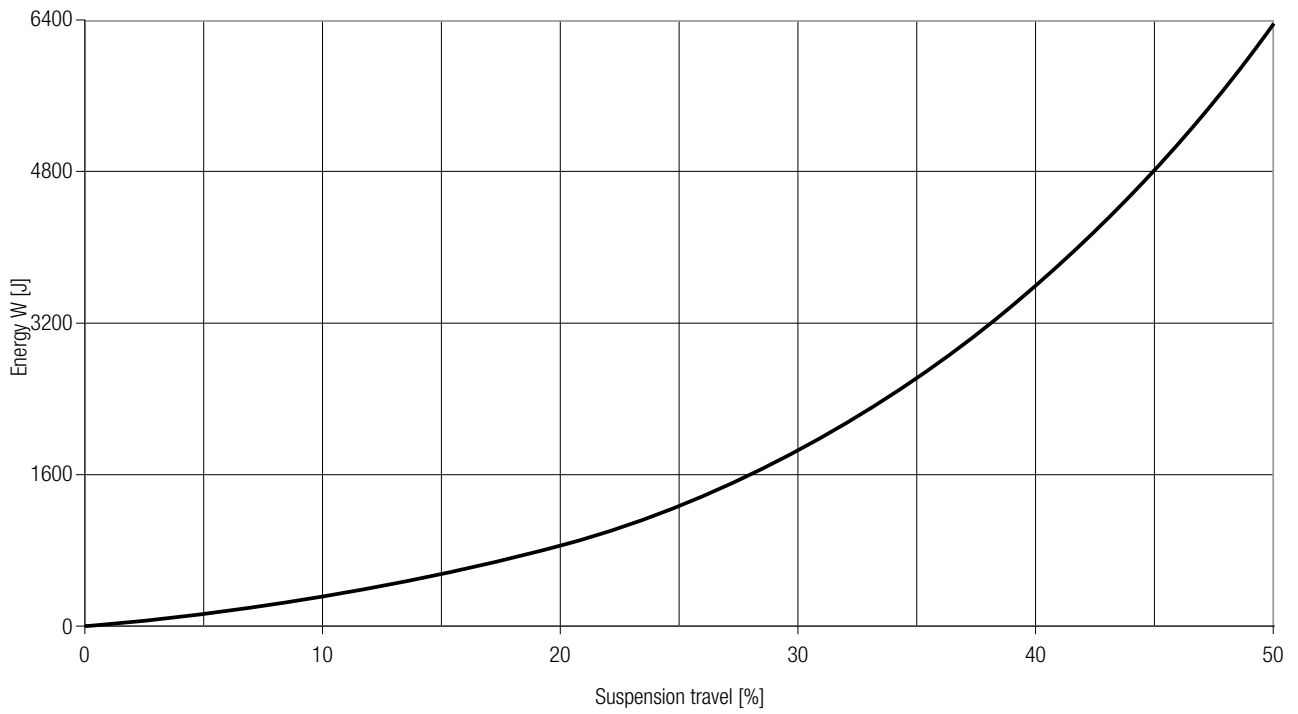


Force-Travel Ø 200

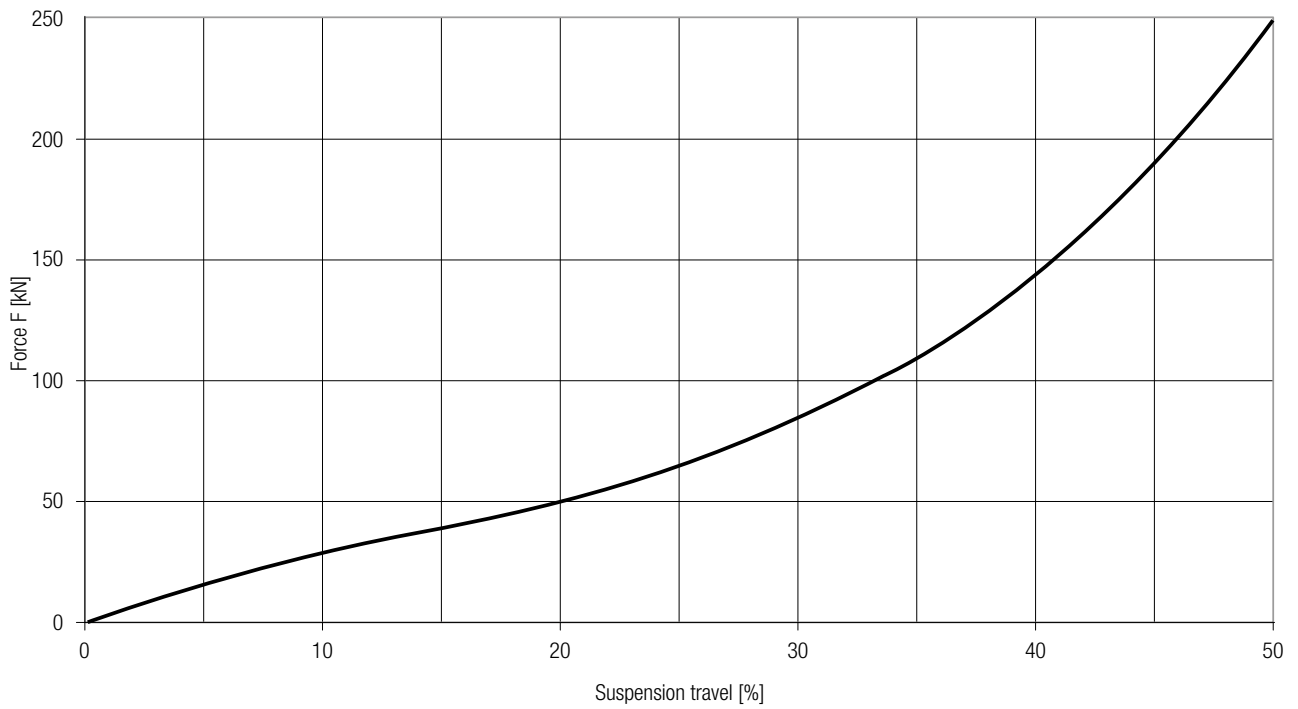


Energy-Travel Ø 250

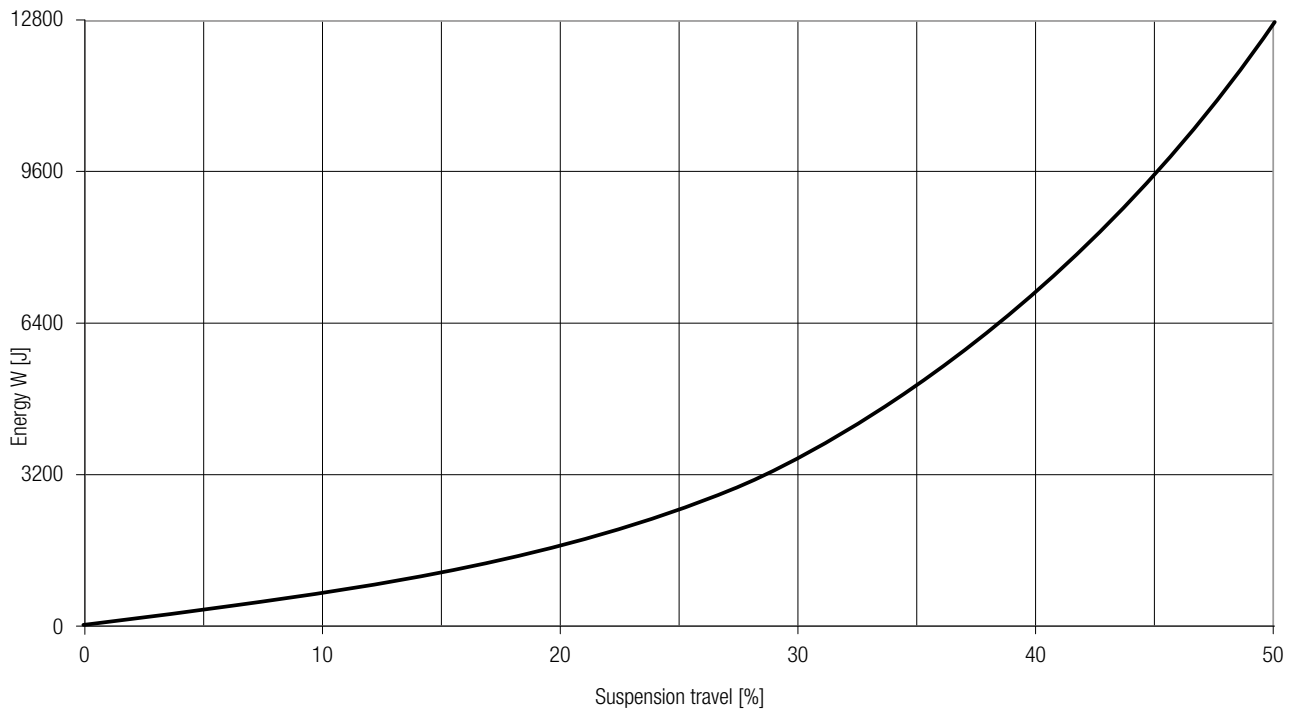


Force-Travel Ø 250

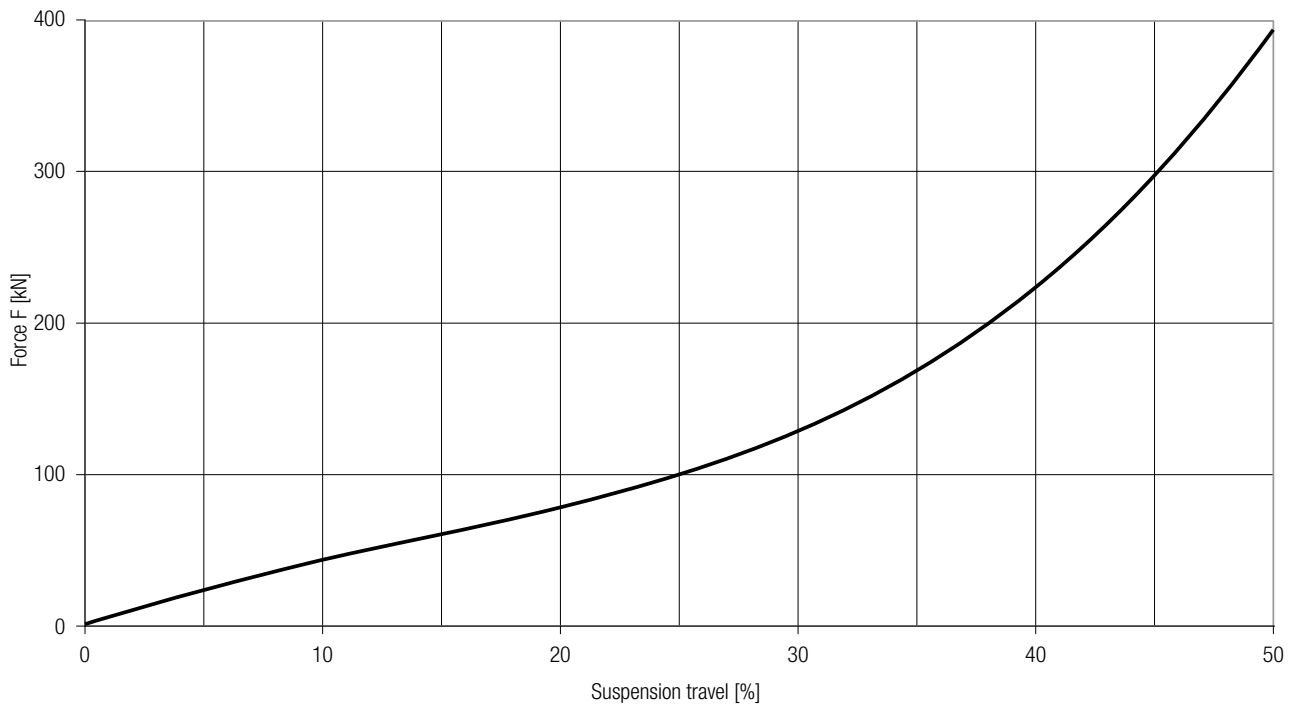

Energy-Travel Ø 315

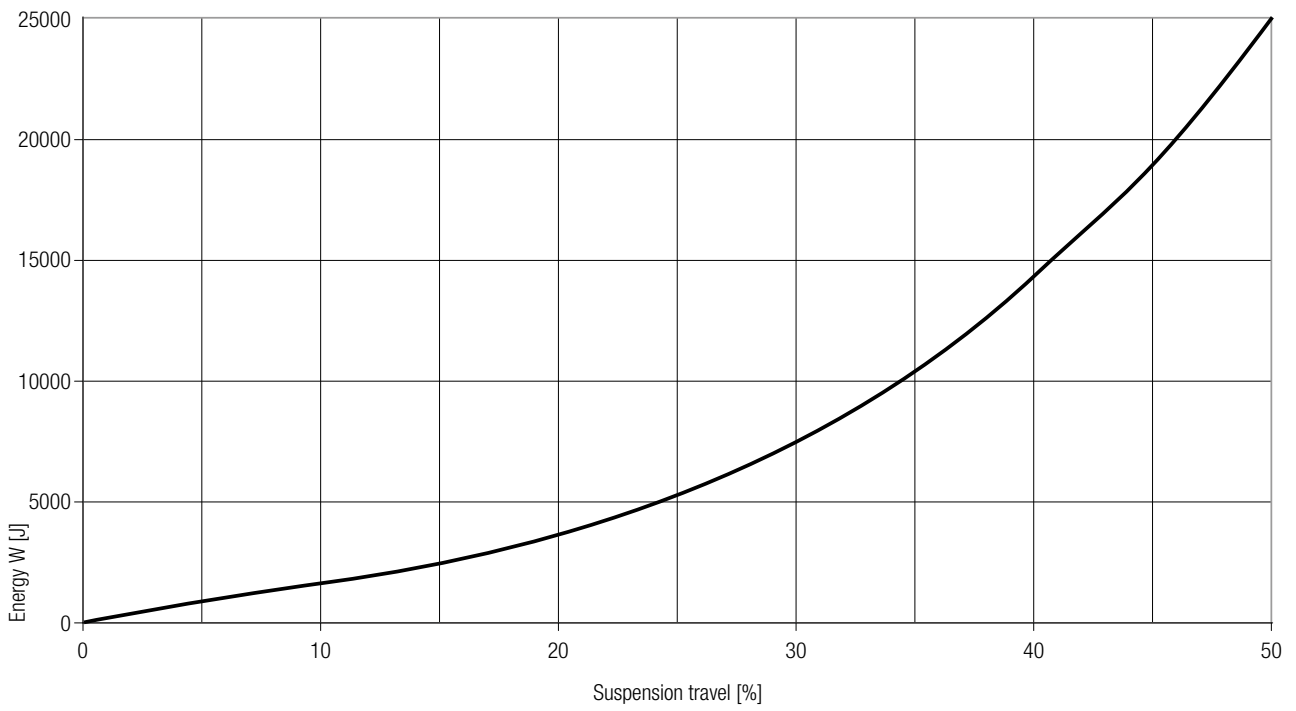

Force-Travel Ø 315

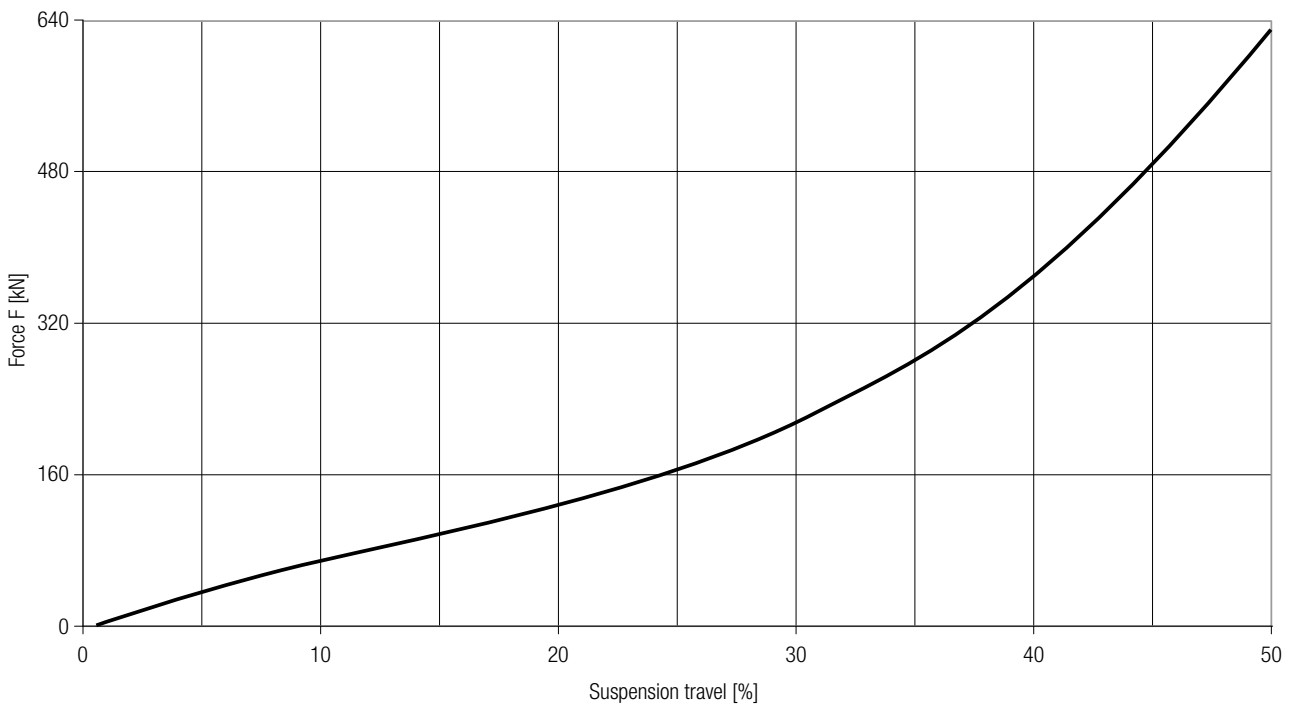

www.conductix.com

Conductix-Wampfler

has just one critical mission:

To provide you with energy and data transmission systems that will keep your operations up and running 24/7/365.

To contact your nearest sales office, please refer to:

**[www.conductix.com/
contact-search](http://www.conductix.com/contact-search)**



Ⓞ DELACHAUX GROUP